

**⚠ IMPORTANT INSTRUCTIONS AND WARNING - Electric Devices**

**WARNING !**


When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury, including the following.

Read all these instructions before operating this product and save these instructions.

**A. GROUNDING INSTRUCTIONS**

1. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.
2. Do not modify the plug provided - if it will not fit the outlet, have the proper outlet installed by a qualified electrician.
3. Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.
4. Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.
5. Use only 3-wire extension cords that have 3-prong grounding plugs and 3-pole receptacles that accept the tool's plug.
6. Repair or replace damaged or worn cord immediately.
7. This tool is intended for use on a circuit that has an outlet that looks like the one illustrated in Sketch A in Figure (below)(120V). The tool has a grounding plug that looks like the plug illustrated in Sketch A in Figure (below). A temporary adapter, which looks like the adapter illustrated in Sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in Sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician. The green-colored rigid ear, lug, and the like, extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box.

**Grounding Method**

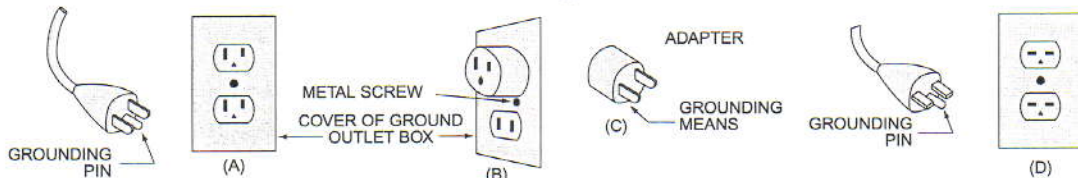

8. **USE PROPER EXTENSION CORD.** Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Table (below) shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

**Minimum gauge for cord**

Ampere Rating		Volts	Total length of cord			
		120V	7.5m(25ft.)	15m(50ft.)	30m(100ft.)	45m(150ft.)
		240V	15m(50ft.)	30m(100ft.)	60m(200ft.)	90m(300ft.)
More Than	Not More Than	Cord Number				
0	6	#18	#16	#16	#14	
6	10	#18	#16	#14	#12	
10	12	#16	#16	#14	#12	
12	16	#14	#12	Not Recommended		

## B. OTHER WARNING INSTRUCTIONS

1. For your own safety read instruction manual before operating tool.
2. Wear eye protection.
3. Replace cracked wheel immediately.
4. Always use guards and eye shields.
5. Do not overtighten wheel nut.
6. Use only flanges furnished with the grinder.
7. REMOVE ADJUSTING KEYS AND WRENCHES. From habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
8. KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
9. DON'T USE IN DANGEROUS ENVIRONMENT. Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
10. Risk of injury due accidental starting. Do not use in an area where children may be present.
11. DON'T FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
12. USE RIGHT TOOL. Don't force tool or attachment to do a job for which it was not designed.
13. WEAR PROPER APPAREL. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry that might get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.
14. ALWAYS USE SAFETY GLASSES. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses. Also use face or dust mask if cutting operation is dusty.
15. SECURE WORK. Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate tool.
16. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best performance and to reduce the risk of injury to persons. Follow instructions for lubricating and changing accessories.
17. DISCONNECT TOOLS before servicing; when changing accessories, such as blades, bits, cutters, and like.
18. REDUCE THE RISK OF UNINTENTIONAL STARTING. Make sure switch is in off position before plugging in.
19. USE RECOMMENDED ACCESSORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury to persons.
20. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF. Don't leave tool until it comes to a complete stop.
21. For recommended operating speed for various applications, please follow the instructions of bur manufacturers.
22. Use Accessories suitable for Max. 40,000 min<sup>-1</sup>(rpm).
23. The system functions normally in the environment where the temperature is at 0-40°C, humidity at 10-85% RH, atmospheric pressure at 500-1060hPa, and no moisture condensation in the Unit. Use at outside of these limits may cause malfunction.
24. Store the system in the place where the temperature is at -10-60°C, humidity at 10-85% RH, atmospheric pressure at 500-1060hPa, and the system is not subject to air with dust, sulfur, or salinity.

## C. Important Instructions and Warning on VOLVERE Vmax.

1. No lubrication is required to either motor or handpiece because ball bearing filled with grease are used in both motor and handpiece.
2. Activation of Circuit Breaker means too much load is applied to the motor beyond the capacity the motor takes. This circuit breaker is designed to protect the motor, but it is desired to perform the grinding work without activating the circuit breaker.
3. Never move Chuck Control Ring of Lever to the direction of LOOSEN while motor is running.
4. Care should be taken not to drop micromotor handpiece on floor or hard work surface in order to avoid damage caused by impact shock.
5. While motor is running, care should be taken to prevent foreign particles from entering the motor through the cooling vent openings.

## ◆ Specifications


### CONTROL UNIT

Model	NE-120
Power Source	AC120V 50/60Hz AC230V 50/60Hz
Weight	2kg (4.44Lb)
Dimensions	W95 (3.74") x D190 (7.48") x H180 (7.09")mm
Output	30W

### MOTOR&HANDPIECE(STANDARD TYPE)

Model	GX35RMS
Speed	1,000~35,000min <sup>-1</sup> (rpm)
Maximum Output	71W (892oz)
Maximum Torque	4.1cN-m
Weight	251g (9.35oz) (include motor cord)
Dimensions	φ 24.5 (0.96") x L143.5 (5.65") mm

### Torque Characteristics of VOLVERE-Vmax

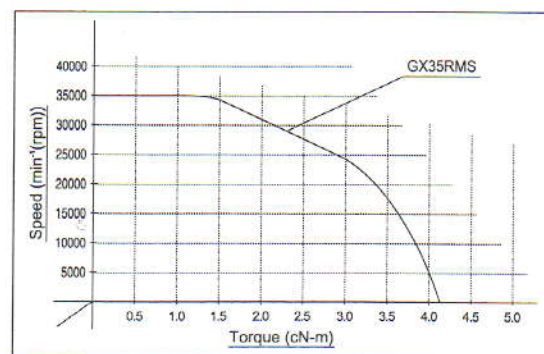

## ◆Description

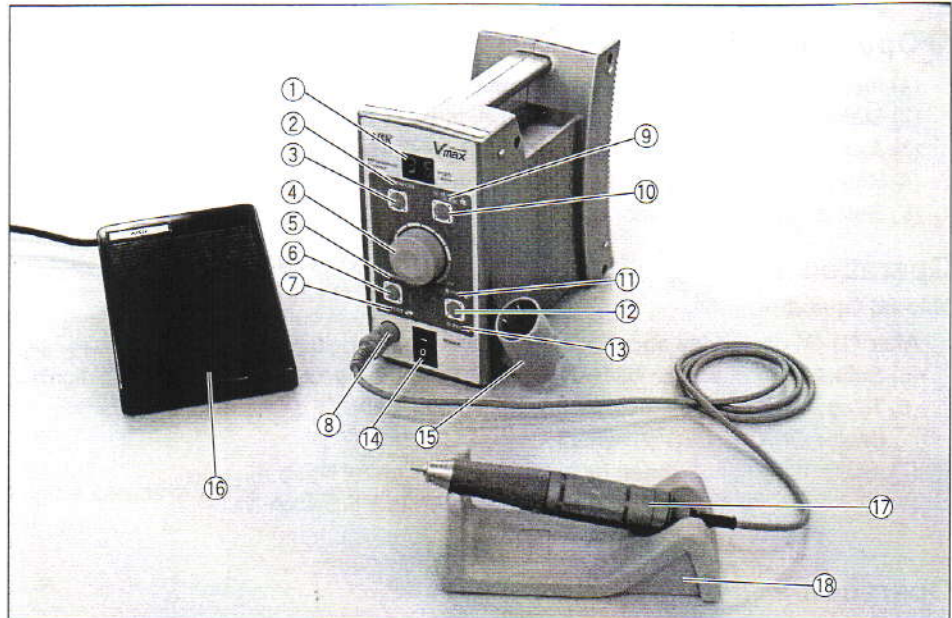


Fig. 1

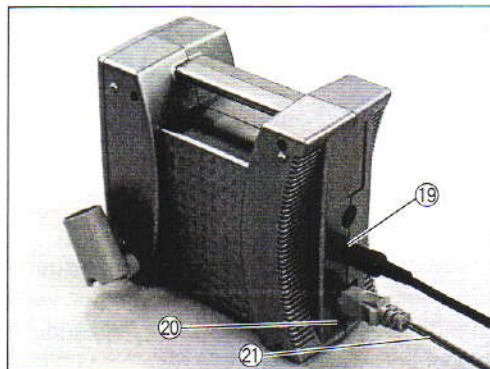


Fig. 2

- |                             |                           |                          |
|-----------------------------|---------------------------|--------------------------|
| ① Speed Display             | ⑧ Output Connector        | ⑮ Handpiece Holder       |
| ② Motor ON/OFF LED          | ⑨ Auto Cruise LED         | ⑯ Foot Control (FC-40)   |
| ③ Motor ON/OFF Switch       | ⑩ Auto Cruise Switch      | ⑰ Motor Handpiece        |
| ④ Speed Control Knob        | ⑪ FWD LED                 | ⑱ Handpiece Stand        |
| ⑤ HAND LED                  | ⑫ FWD/REV Selector Switch | ⑲ Foot Control Connector |
| ⑥ HAND/FOOT Selector Switch | ⑬ REV LED                 | ⑳ AC Power Fuse Box      |
| ⑦ FOOT LED                  | ⑭ Power Switch            | ㉑ Power Cord             |

## ◆Installation

### 1. Connecting Motor Cord Plug

Insert the motor cord plug in Output Connector ⑧ (Fig. 3)

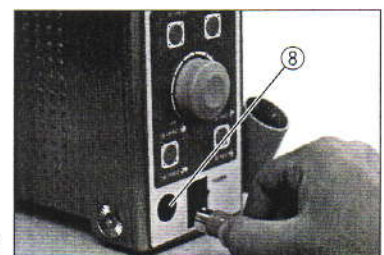


Fig. 3

### 2. Connecting Power Cord

Insert Power Cord ㉑ plug in AC Power Fuse Box ㉒ at the back of the control unit, aligning the fuse box and plug. (Fig. 4)

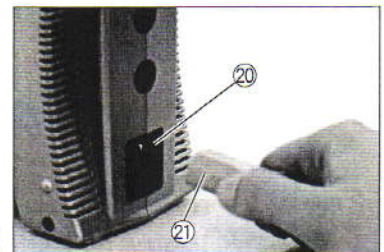


Fig. 4

### 3. Connecting Foot Control

Insert Foot Control ⑯ plug in Foot Control Connector ⑲ at the back of the control unit. (Fig.5)

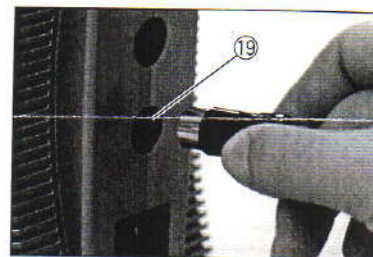


Fig. 5

### 4. Mounting Handpiece Holder

Mount Handpiece Holder ⑮ at either side of the control unit.  
Adjust the angle and tighten the screw. (Fig.6)

※Handpiece Holder ⑮ can be mounted at either side of the control unit.

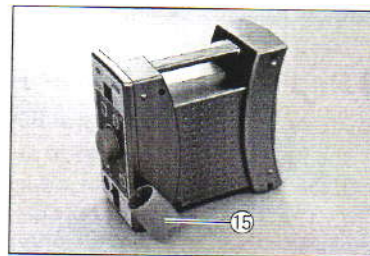


Fig. 6

### 5. Assembling and Mounting Suspension Handpiece Cradle (Option)

#### ●Mount Handpiece Cradle

Mount the handpiece cradle and other parts at the end of the suspension arm as shown in Fig.7 and secure with the nut.

Assembling of Hpc. Cradle



Fig. 7

#### ●Mounting on Control Unit

Mount the suspension arm on either side of the Control Unit, on which the handpiece holder is not attached, and secure with the screw. (Fig.8)

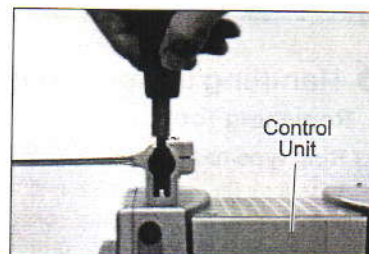


Fig. 8

#### ●Adjusting Length of Suspension Arm

Loosen the fastening ring of the suspension arm to extend the arm and secure with screw. (Fig.9)

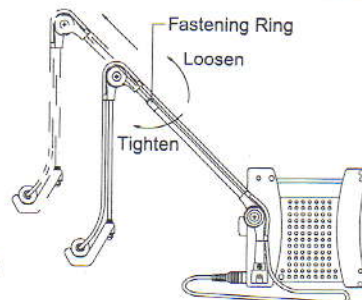


Fig. 9

#### ●Setting Motor Cord

Place the motor handpiece on the handpiece cradle on the work bench.  
Take enough cord length for work, and lock the motor cord in the cord clamps on the suspension arm. (Fig.10)



Fig.10

#### ●Adjusting Angles of Suspension Arm

Angles of A and B are freely adjustable. (Fig.11) If adjusting the angles repeatedly, the joint parts might become loose. Tighten the screws with Phillips screwdriver on both sides. (Fig.12)


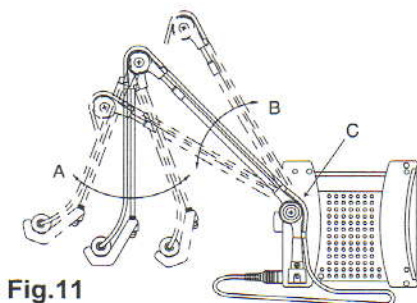


Fig.11

Tighten Joint Section of Arrow C on Fig.11

Fig.12

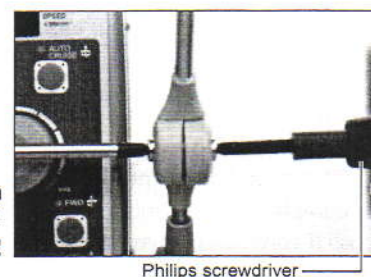

Phillips screwdriver

## ◆ Operation Procedures

- (1) Insert Power Cord ⑫ plug into an outlet.
- (2) Make sure that Speed Control Knob ④ is set to the lowest position.
- (3) Turn on Power Switch ⑭, and check if Speed display ① shows.
- (4) Select either forward or reverse direction by FWD/REV Selector Switch ⑫. Every pressing alternates FWD and REV
- (5) Select either hand or foot operation by HAND/FOOT Selector Switch ⑥. Every pressing alternates HAND and FOOT

### Operation-1

#### Manual Operation

After (1)-(4) operations above, go to the following procedures.

- (5) Select hand operation by HAND/FOOT Selector Switch ⑥. (HAND LED ⑤ lights.)
- (6) To operate Motor Handpiece ⑰, press Motor ON/OFF Switch ③.  
(Motor ON/OFF LED ② lights.)
- (7) Adjust the rotation speed by turning Speed Control Knob ④.
- (8) To stop Motor Handpiece ⑰, press Motor ON/OFF Switch ③.  
(Motor ON/OFF LED ② stops lighting.)

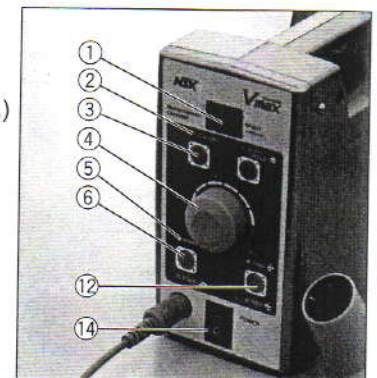


Fig.13

### Operation-2

#### Foot Control Operation

After (1)-(4) operations above, go to the following procedures.

- (5) Select foot operation by HAND/FOOT Selector Switch ⑥. (FOOT LED ⑦ lights.)
- (6) To operate Motor Handpiece ⑰, apply pressure to Foot Control ⑮.
- (7) Adjust the maximum speed by turning Speed Control Knob ④. The rotation speed can be adjusted by foot up to the maximum speed, that is preset by Speed Control Knob ④. (Variable operation)
- (8) To stop Motor Handpiece ⑰, stop applying pressure to Foot Control ⑮.

#### ※ Auto Cruise Mechanism

To operate Motor Handpiece ⑰ at a constant speed below the maximum speed preset by Speed Control Knob ④ press Auto Cruise Switch ⑩ when the motor handpiece rotates at the required speed. Auto Cruise LED ⑨ lights and the rotation speed would not change even if the foot Control is released. To cancel auto cruise operation, press Auto Cruise Switch ⑩ or Foot Control ⑮ once again.



#### Caution

Make sure that the chuck control lever or the bur lock ring is at lock position when starting the motor handpiece.

## ◆ Protective Circuit

When the control unit is overloaded or the motor is to operate in spite of the chuck control lever or the bur lock ring is in open position, the protective circuit functions to stop the motor and Speed Display ① shows error codes.

#### To reset the protective circuit,

- At manual operation, press Motor ON/OFF Switch ③.
- At foot control operation, release Foot Control ⑮.

## ◆ Error Code

When the motor stops operation, Speed Display ① shows error codes, which instruct what is problem.

Error code	Description	Cause
E 0	Detection of overcurrent	<ul style="list-style-type: none"> <li>• Long-time use at excessive load (Overcurrent).</li> <li>• Short-circuited power cord.</li> <li>• Handpiece trouble.</li> <li>• Short-circuited motor winding.</li> <li>• Open collet chuck.</li> </ul>
E 1	Detection of overvoltage	Faulty PC Board.
E 2	Detection of discontinuity in Speed Control Knob ④	No signal from Speed Control Knob ④.
E 3	Detection of discontinuity in Foot Control ⑮	No signal from Foot Control ⑮.

E 6	Overheating inside the control unit	Long-time use at excessive load built up heat inside the control unit.
E 7	Breaking circuit error	<ul style="list-style-type: none"> <li>Abnormal voltage in the starting or the shut-down circuit.</li> <li>The starting or the shut-down circuit trouble.</li> </ul>
E 8	EEPROM abnormal	Internal memory faulty.
E 9	Rotor lock error	Faulty PC Board.

Refer to Troubleshooting for action taken when the error code shows.

### ◆ Replacing AC Power Fuse

There is a fuse in AC Power Fuse Box ⑳. Push links at the either side of the fuse case and remove to check.

If the fuse is blown, replace with a new fuse of same rating.  
(3.15A-125V for 120V) (T1A-250V for 230V) (Fig.14)

- \* Fuse (for 120V): Order No. U166-151
- Fuse (for 230V): Order No. U167-151

#### ⚠ Caution

Fuse is burned out when a short circuit occurs or when over-voltage is flowed into the primary current source. If the cause is uncertain, return the product to an authorized NSK's service shop for inspection.



Fig.14



Fig.15

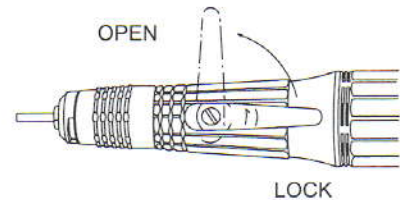


Fig.16

### ◆ Handling Motor and Handpiece

#### 1. Replacing Tool

##### a.) Ring type handpiece

To unlock the collet chuck and remove the tool, turn the bur lock ring to OPEN with a click. To tighten the collet chuck and mount the tool, turn the bur lock ring to LOCK with a click. (Fig. 15)

##### b.) Lever type handpiece

To unlock the collet chuck and remove the tool, make a quarter turn of the chuck control lever to OPEN. To tighten the collet chuck and mount the tool, turn the chuck control lever back to LOCK. (Fig. 16)

#### 2. Cleaning and Replacing Collet Chuck

##### (1) Removal of Chuck

To remove the chuck, open the bur lock ring or the chuck control lever and turn the chuck counterclockwise with the provided spanner wrench. (Fig. 17)

##### (2) Cleaning of Chuck

Remove and clean the chuck as frequently as possible in the ultrasonic cleaner. Clean at least once a week.

#### ⚠ Caution

Neglecting to clean the chuck for a long time is very dangerous because wax, gypsum, etc., accumulate in the chuck and the bur is caught insecurely, causing runout.

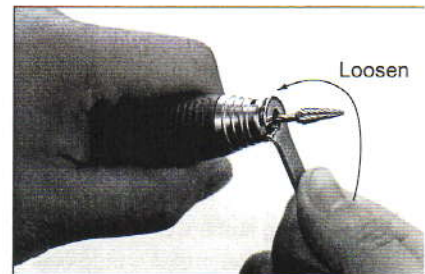


Fig.17

##### (3) Insertion of Chuck

Thinly apply oil before insertion.

Open the bur lock ring or the chuck control lever, insert the dummy bur or the bur in use into the chuck, and turn the chuck clockwise by hand until it stops. Then, lock the bur lock ring or the chuck control lever, and the chuck could hold the bur securely. (Fig. 18)

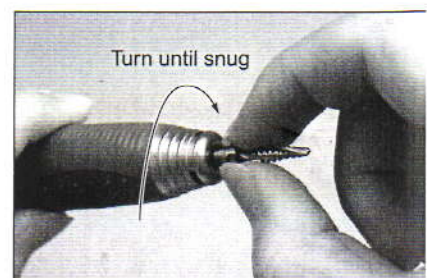


Fig.18

### 3. Connecting and Disconnecting Motor Cord and Motor

To remove the motor cord, loosen the joint nut at the back of the motor.

To connect, align the + marks of the motor and the joint nut. Insert the pins completely and tighten the joint nut. (Fig. 19)

※ If connecting inversely, the motor will run in the reverse direction.

molded + markings      molded + markings



Joint Nut

Fig.19

#### 4. Replacing Carbon Brush

To replace carbon brushes, refer to “Replacing Carbon Brush” of the operation manual in the package of new carbon brush.

\* Carbon Brush for GX35RM/GX35EM (Pack of 2) : Order No. E023-011S

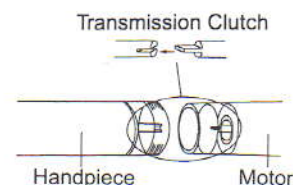


Fig.20



#### Cautions in connecting the handpiece and the motor

If the drive shaft of the motor does not engage the drive dog on the handpiece, do not force them to turn. It would break the motor. Turn the handpiece back a few threads, rotate the collet chuck or the tool by hand to engage the drive shaft and the drive dog. Screw them together firmly.

#### ◆ Handpiece Stand

The service tool and the collet chuck can be mounted on the bottom of the handpiece stand.(Fig. 21)



Fig.21

#### ◆ Troubleshooting

Check followings before requesting repair.














#### <Control Unit and Motor>

Trouble	Probable Cause	Action Taken
LED Speed Display does not show.	Power Cord is disconnected.	Insert Power Cord Securely.
	Blown fuse.	Replace a fuse of same rating. If the cause of blown fuse is unknown, ask for inspection.
	Faulty Power Switch.	Ask for repair.
Foot Control does not turn on motor.	Foot Control is loose or disconnected.	Connect Foot Control cord securely.
	HAND/FOOT Selector Switch is set to HAND.	Set to FOOT.
Error code E0 shows.	The chuck control lever or the bur lock ring is in open position. Check if the tool can be rotated with fingers. If you have another motor and motor cord, use them and check the operation.	Lock the chuck control lever or the bur lock ring. If any abnormalities are found during rotation, ask for motor & handpiece repair. If replaced motor operates normally, original motor and motor cord are faulty. Ask for repair.
Error code E1 shows.	Motor rotates at high speed.	Ask for control unit repair.
	Motor does not rotate.	Ask for control unit repair.
Error code E2 shows.		Speed Control Knob or PC Board might be faulty. Ask for control unit repair.
Error code E3 shows.	Set HAND/FOOT Selector Switch to HAND and check the operation.	Speed Control Knob or PC Board might be faulty. Ask for control unit repair.
Error code E6 shows.	Stop operation for approximately 10 minutes in a cool place and check the operation again.	There is no problem if it operates normally. Make sure that it is not hot in the surroundings and storage location. If the error code frequently shows, ask for control unit repair.
Error code E7 shows.	Repeat starting and stop by Power Switch.	There is no problem if it operates normally. If the error code still shows, ask for control unit repair.
Error code E8 shows.	Repeat starting and stop by Power Switch.	If the error code still shows, ask for control unit repair.
Error code E9 shows.	Check if the tool can be rotated with fingers.	If the tool does not rotate normally, ask for motor and handpiece repair.
The speed cannot be increased.	The max speed can be set with Speed Control Knob in Foot Control operation mode.	Set Speed Control Knob to the max speed.

#### <Handpiece>

Problem	Cause	Action Taken
No rotation when the chuck control lever or the bur lock ring is locked.	Foreign objects inside the ball bearings, or bearings frozen.	Ask for repair.
Overheating during rotation.	Foreign objects inside the ball bearings could have worn ball bearings.	Ask for repair.
Vibration and/or noise during rotation.	Worn ball bearings caused by the foreign objects.	Ask for repair.
	Bent tools.	Replace tool.
Heavy tool run-out.	Debris inside the collet chuck or inside the spindle.	Clean inside the collet chuck or the spindle.
	Worn collet chuck.	Replace collet chuck.
	Worn ball bearings.	Ask for repair.
Tool walks out.	Loose collet chuck.	Tighten collet chuck securely. (See ◆ Handling Motor and Handpiece.)

## ◆ Optional Micromotor Handpieces series and spare parts

Product	Cat.#	Model / Description
	E205	GX35RM & SCD For Ring Type Handpiece Standard Motor with Straight Motor Cord
	E053	GX35M & SCD For Lever Type Handpiece Standard Motor with Straight Motor Cord
	E054	GX35EM & SCD E-Type Motor with Straight Motor Cord
	H214	UHR-35 Ring Type Handpiece for GX35RM
	H063	VH Lever Type Handpiece for GX35M
	H068	VH-E E-Type Lever Type Handpiece for GX35EM
	H178	VR-E E-Type Ring Type Handpiece for GX35EM
	H156	VC45 Angle Type Handpiece for GX35M
	E023-011S	Carbon Brush
	H203-180	CHH2.35 $\phi$ 2.35 chuck
	E257-012	GX35SCD Straight Motor Cord
	E257-013	GX35CCD Coiled Motor Cord
	Z246	Vmax Handpiece Cradle

### NAKANISHI INC.

[www.nsk-inc.com](http://www.nsk-inc.com)

700 Shimohinata Kanuma-shi  
Tochigi 322-8666,  
Japan

### NSK Dental Spain SA

[www.nsk-spain.es](http://www.nsk-spain.es)

C/ Mòdena, 43 El Soho - Európolis  
28232 Las Rozas, Madrid,  
Spain

### NSK Europe GmbH

[www.nsk-europe.de](http://www.nsk-europe.de)

Elly-Beinhorn-Strasse 8  
65760 Eschborn,  
Germany

### NSK Oceania Pty Ltd

[www.nsk-inc.com](http://www.nsk-inc.com)

Unit 22, 198-222 Young St.  
Waterloo, Sydney,  
NSW 2017, Australia

### NSK France SAS

[www.nsk.fr](http://www.nsk.fr)

19 avenue de Villiers  
75017 Paris,  
France

### NSK Middle East

[www.nsk-inc.com](http://www.nsk-inc.com)

Room 6EA-701, 7th Floor, East Wing No.6  
Dubai Airport Free Zone,  
PO Box 54316 Dubai, UAE

### NSK United Kingdom Ltd

[www.nsk-uk.com](http://www.nsk-uk.com)

Office 5, Gateway1000,  
Arlington Business Park, Whittle Way,  
Stevenage, SG1 2FP, UK

### NSK America - Canadian Branch

[www.nsk-inc.com](http://www.nsk-inc.com)

1054 Centre St, Suite 283  
Thornhill, Ontario,  
Canada L4J 8E5

Specifications are subject to change without notice.

'08.09.01 